



NVMS 7000 Apps User Manual (iOS/Android)


1. Look for NVMS 7000 icon in the mobile device main page or sub-menu. Then, press the icon to open.

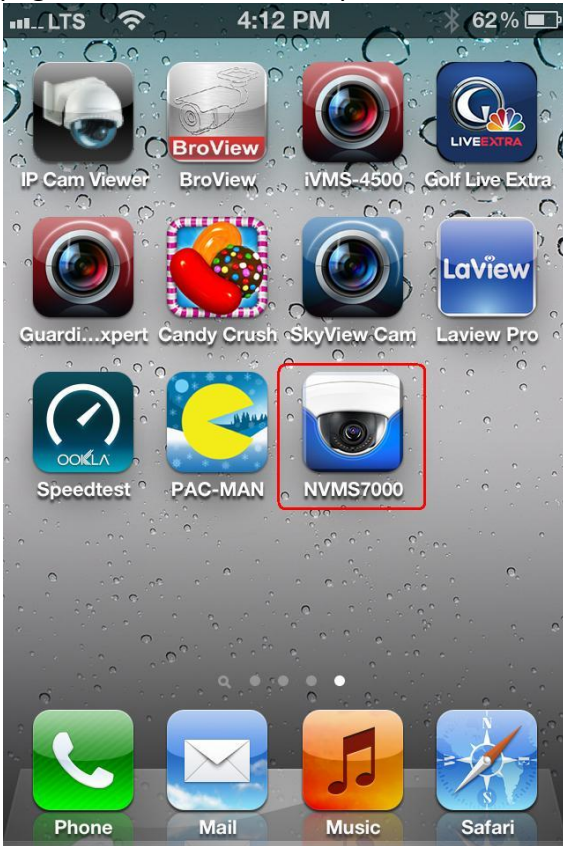

2. Select **Menu** (☰), then select add device (3rd icon) to the right.

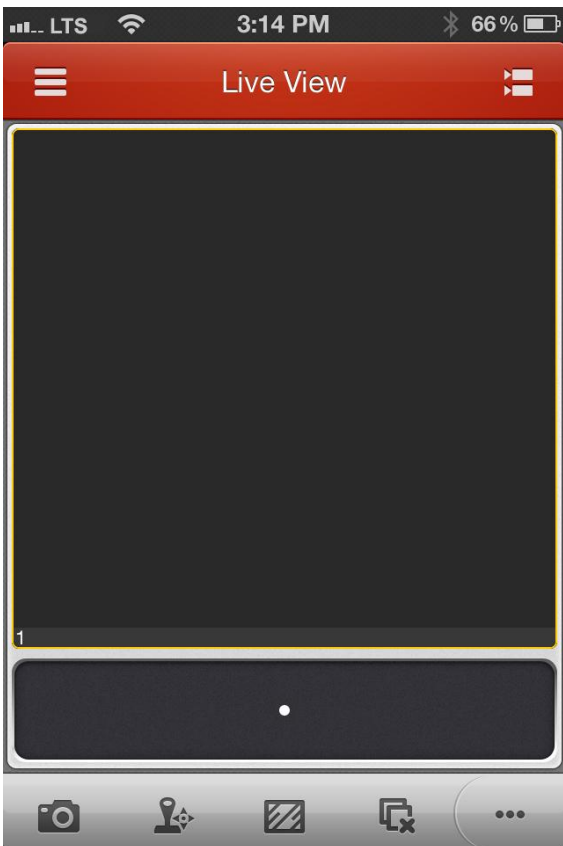


NVMS7000 main view

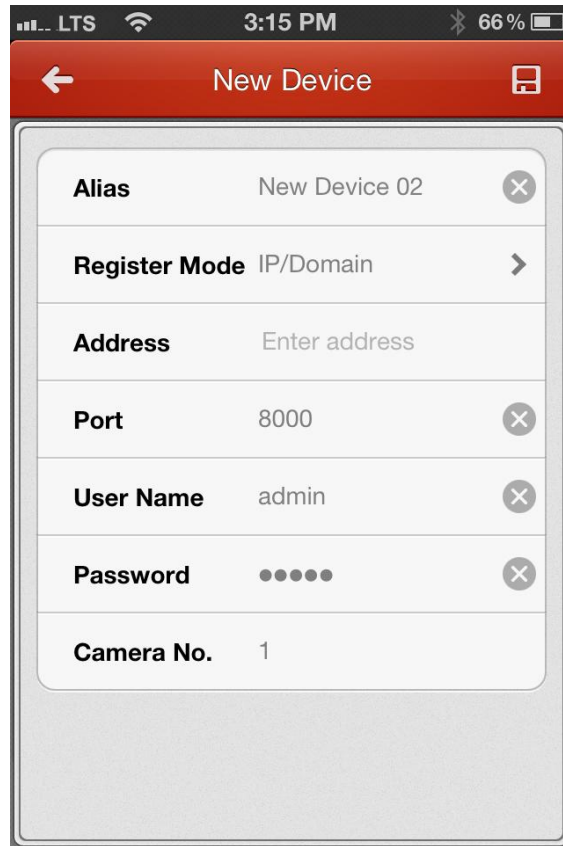


Add new device

3. Input the device login information (Alias, ip address, port, user name, and password). **Register mode** is default as IP/Domain. Then, press the floppy disk to save the setting.

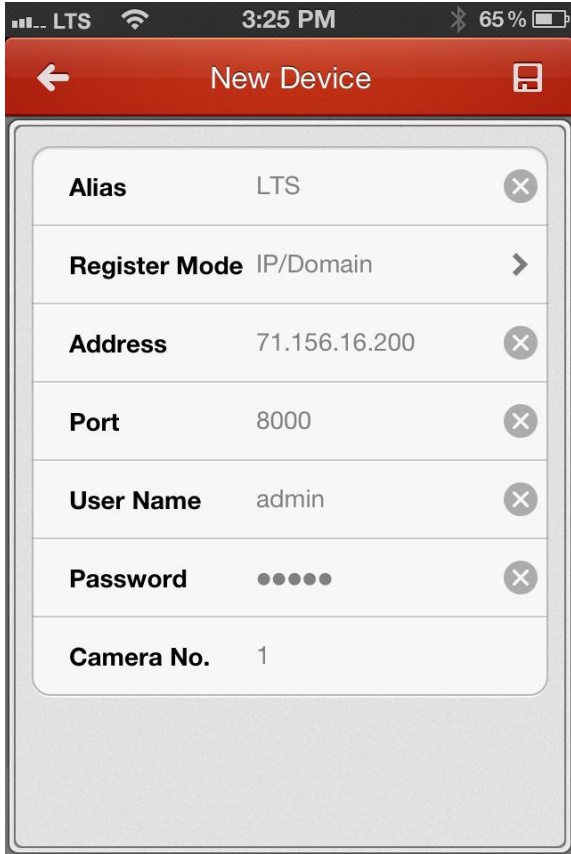


Add device

Note: When the device information input correctly, the apps will automatic connected, then the “Start live view” button is active in bold.

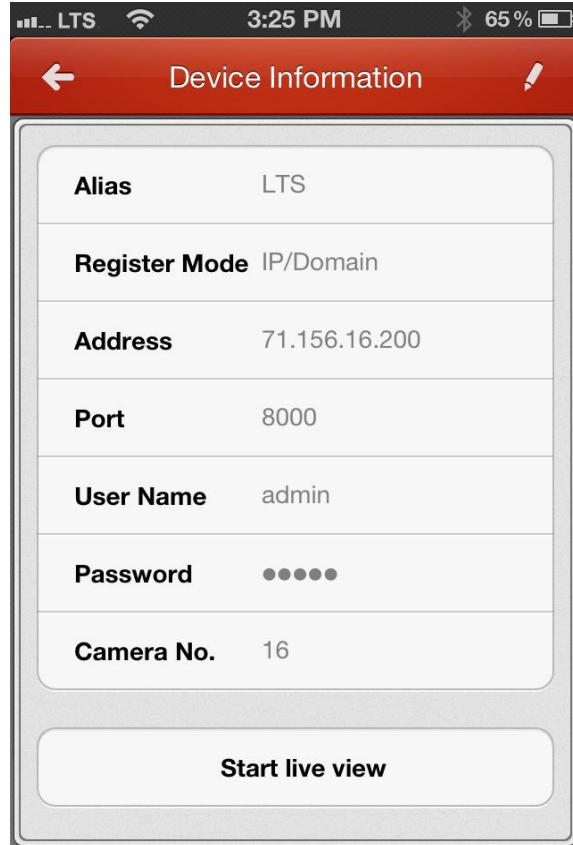

Device successfully added

4. Press “**Start live view**” to begin monitoring live image through NVMS7000 apps.

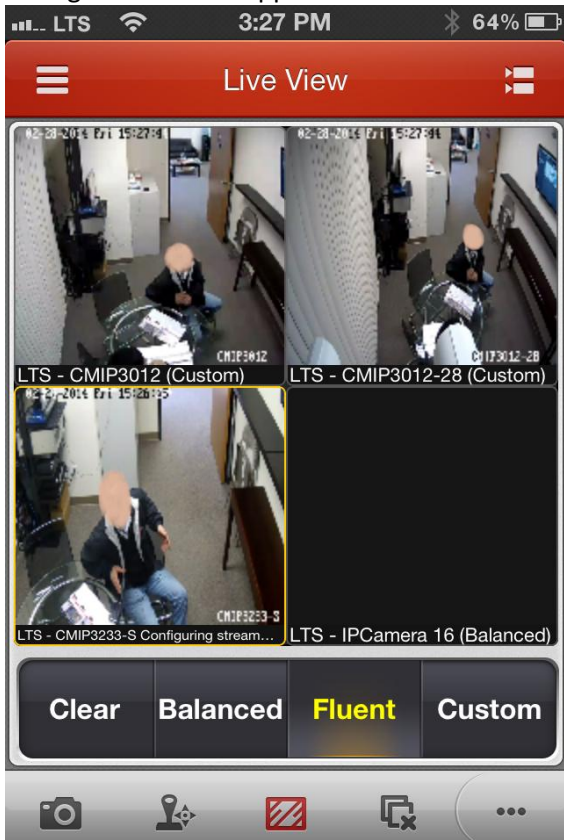

Live view image.

Note: You can adjust the image clarity through selecting Clear, Balanced, Fluent, or Custom. These options will change if the connection speed between the recorder system and mobile device has good bandwidth speed. Otherwise, the selected option will not take effect upon the change.